

DANH SÁCH SẢN PHẨM SẴP NGỪNG CUNG CẤP
LIST OF ITEMS TO BE DISCONTINUED (*Be discontinued after clearing stock)

STT No	Mã hàng Part Number	Tên hàng Product Name	Danh mục Category	Thương hiệu Brand	Tình trạng / Status Discontinued or Available
88	MPB2CFA10M-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
89	MPB2CFA10M-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
90	MPB2CFA10M-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
91	MPB2CFA10M-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
92	MPB2CFA11M-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
93	MPB2CFA11M-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
94	MPB2CFA11M-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
95	MPB2CFA11M-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
96	MPB2CPM10M-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
97	MPB2CPM10M-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
98	MPB2CPM10M-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
99	MPB2CPM10M-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
100	MPB2MM10M-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
101	MPB2MM10M-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
102	MPB2MM10M-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
103	MPB2MM10M-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
104	MPB2MM11M-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
105	MPB2MM11M-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
106	MPB2MM11M-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
107	MPB2CFM11-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
108	MPB2CFM11-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
109	MPB2CFM11-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
110	MPB2CFM11-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
111	MPB2CFA11-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
112	MPB2CFA11-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
113	MPB2CFA11-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
114	MPB2CFA11-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
115	MPB2CFM10M-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
116	MPB2CFM10M-G-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
117	MPB2CFM10M-R-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
118	MPB2CFM10M-Y-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
119	MPB2CFM11M-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
120	MPB2CFM11M-G-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
121	MPB2CFM11M-R-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
122	MPB2CFM11M-Y-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
123	MPB2CFA10M-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
124	MPB2CFA10M-G-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
125	MPB2CFA10M-R-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
126	MPB2CFA10M-Y-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
127	MPB2CFA11M-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
128	MPB2CFA11M-G-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
129	MPB2CFA11M-R-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
130	MPB2CFA11M-Y-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
131	2CCV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
132	MEB3401	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
133	MEB3402	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
134	MEB3411	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
135	MSB1R2116	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
136	MSB1R2114	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
137	MSB1S2116	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
138	MSB1S2114	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
139	MSB1C2116	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
140	MSB1C3226	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
141	MSB3BC210	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
142	MSB3BC211	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
143	MSB3BC320	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
144	MSB3BC340	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
145	MSB1R216-KL	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
146	MSB2BC210-KL	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
147	MSB2BC320-KA	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
148	MSB3BC210-KL	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Available
149	ML1RF246-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
150	ML1RF246-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
151	ML1RF246-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
152	ML1SF246-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
153	ML1SF246-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
154	ML1CP246-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
155	ML1CP1106-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
156	ML1CP2206-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
157	ML3D24-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
158	ML3D24-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
159	ML3D24-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
160	ML3D24-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
161	ML3D110-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
162	ML3D110-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
163	ML3D110-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
164	ML3D220-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
165	ML3D220-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
166	ML3D220-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
167	ML12CP246-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
168	ML12CP246-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
169	ML12CP246-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
170	ML2CFS246-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
171	ML2CFS246-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
172	ML2CFS246-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Available
173	ML2CFS1106-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Discontinued
174	ML2CFS1106-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Available

DANH SÁCH SẢN PHẨM SẴP NGỪNG CUNG CẤP
 LIST OF ITEMS TO BE DISCONTINUED (*Be discontinued after clearing stock)

STT No	Mã hàng Part Number	Tên hàng Product Name	Danh mục Category	Thương hiệu Brand	Tình trạng / Status Discontinued or Available
175	ML2CFS1106-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
176	ML2CFS1106-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
177	ML2D224-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
178	ML2D224-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
179	ML2D224-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
180	ML2D224-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
181	ML2D2110-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
182	ML2D2110-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Discontinued
183	ML2D2110-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
184	ML2D2110-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
185	ML1SF246-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
186	ML1SF246-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
187	ML1CP1106-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
188	ML1CP1106-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
189	ML1CP2206-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
190	ML1CP2206-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
191	ML1CP2206-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
192	ML3D110-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
193	ML3D220-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
194	MWFG-40	FAN	Electrical & Controls	MISUMI	Discontinued
195	MWFG-80	FAN	Electrical & Controls	MISUMI	Discontinued
196	MWFG-92	FAN	Electrical & Controls	MISUMI	Discontinued
197	MWFG-120	FAN	Electrical & Controls	MISUMI	Discontinued
198	MWFG-60	FAN	Electrical & Controls	MISUMI	Discontinued
199	MPFG-80	FAN	Electrical & Controls	MISUMI	Discontinued
200	MPFG-92	FAN	Electrical & Controls	MISUMI	Discontinued
201	MPFG-120	FAN	Electrical & Controls	MISUMI	Discontinued
202	MPFG-60	FAN	Electrical & Controls	MISUMI	Discontinued
203	C4010H12BPLB-W-7	FAN	Electrical & Controls	MISUMI	Avai lable
204	C8025H24BPLB-W-7	FAN	Electrical & Controls	MISUMI	Avai lable
205	C9225H24BPLB-W-7	FAN	Electrical & Controls	MISUMI	Avai lable
206	MB1R24	BUZZER PB	Electrical & Controls	MISUMI	Discontinued
207	MB3C24	BUZZER PB	Electrical & Controls	MISUMI	Discontinued
208	MB1R24I	BUZZER PB	Electrical & Controls	MISUMI	Discontinued
209	MB3C24C	BUZZER PB	Electrical & Controls	MISUMI	Avai lable
210	MB3C24I	BUZZER PB	Electrical & Controls	MISUMI	Avai lable
211	MPL12-RFM114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
212	MPL12-RFM114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
213	MPL12-RFM114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
214	MPL12-RFM114-W	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
215	MPL12-RFA114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
216	MPL12-RFA114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
217	MPL12-RFA114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
218	MPL12-RFA114-W	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
219	MPL12-SPM114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
220	MPL12-SPM114-W	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
221	MPL12-SPA114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
222	MPL12-SPA114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
223	MPL12-SPA114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
224	MPL12-SPA114-W	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
225	MPL12-CPM114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
226	MPL12-CPM114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
227	MPL12-CPM114-W	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
228	MPL12-GPA114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
229	MPL12-GPA114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
230	MPL12-GPA114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
231	MPL12-GPA114-W	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
232	MPB12-RFM114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
233	MPB12-RFM114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
234	MPB12-RFM114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
235	MPB12-RFM114-B	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
236	MPB12-RFA114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
237	MPB12-RFA114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
238	MPB12-RFA114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
239	MPB12-RFA114-B	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
240	MPB12-SPM114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
241	MPB12-SPM114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
242	MPB12-SPM114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
243	MPB12-SPM114-B	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
244	MPB12-SPA114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
245	MPB12-SPA114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
246	MPB12-SPA114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
247	MPB12-SPA114-B	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
248	MPB12-CPM114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
249	MPB12-CPM114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
250	MPB12-CPM114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
251	MPB12-CPM114-B	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
252	MPB12-GPA114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
253	MPB12-GPA114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
254	MPB12-GPA114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
255	MPB12-GPA114-B	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
256	PM8025HA1BAL-7	FAN	Electrical & Controls	MISUMI	Avai lable
257	PM9225HA1BAL-7	FAN	Electrical & Controls	MISUMI	Avai lable
258	PM1238HA1BAL-7-N	FAN	Electrical & Controls	MISUMI	Avai lable
259	PM8025HA2BAL-7	FAN	Electrical & Controls	MISUMI	Avai lable
260	PM9225HA2BAL-7	FAN	Electrical & Controls	MISUMI	Avai lable
261	PM1225HA2BAL-7	FAN	Electrical & Controls	MISUMI	Avai lable

DANH SÁCH SẢN PHẨM SẴP NGỪNG CUNG CẤP
LIST OF ITEMS TO BE DISCONTINUED (*Be discontinued after clearing stock)

STT No	Mã hàng Part Number	Tên hàng Product Name	Danh mục Category	Thương hiệu Brand	Tình trạng / Status Discontinued or Available
262	PM1238HA2BAL-7-N	FAN	Electrical & Controls	MISUMI	Avai lable
263	C4010H12BPBLB-7	FAN	Electrical & Controls	MISUMI	Avai lable
264	C8025X24BPBLB-7	FAN	Electrical & Controls	MISUMI	Avai lable
265	C9225H24BPBLB-7	FAN	Electrical & Controls	MISUMI	Avai lable
266	C6025M24BPBLB-7	FAN	Electrical & Controls	MISUMI	Avai lable
267	C9225H24BPBLB-2A-7	FAN	Electrical & Controls	MISUMI	Avai lable
268	R1238L24BPBLB-2A-7	FAN	Electrical & Controls	MISUMI	Avai lable
269	C6025M24BPBLB-2A-7	FAN	Electrical & Controls	MISUMI	Avai lable
270	C4010H12BPBLB-2B-7	FAN	Electrical & Controls	MISUMI	Avai lable
271	C8025X24BPBLB-2B-7	FAN	Electrical & Controls	MISUMI	Avai lable
272	C9225H24BPBLB-2B-7	FAN	Electrical & Controls	MISUMI	Avai lable
273	R1238L24BPBLB-2B-7	FAN	Electrical & Controls	MISUMI	Avai lable
274	C6025M24BPBLB-2B-7	FAN	Electrical & Controls	MISUMI	Avai lable
275	ML12CP246-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
276	MPL12-SPM114-R	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
277	MPL12-SPM114-Y	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
278	C4010H12BPBLB-2A-7	FAN	Electrical & Controls	MISUMI	Avai lable
279	MB1R24C	BUZZER PB	Electrical & Controls	MISUMI	Avai lable
280	ML1RF246-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
281	MPB2MM11M-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Discontinued
282	R1238L24BPBLB-7	FAN	Electrical & Controls	MISUMI	Avai lable
283	MSB1R3226	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Avai lable
284	MSB2BC211-KL	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Avai lable
285	ML1CP1106-W	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
286	C8025X24BPBLB-2A-7	FAN	Electrical & Controls	MISUMI	Avai lable
287	MPL12-CPM114-G	PUSH BUTTON DIA UNDER 12	Electrical & Controls	MISUMI	Avai lable
288	PM1225HA1BAL-7	FAN	Electrical & Controls	MISUMI	Avai lable
289	R1238L24BPBLB-W-7	FAN	Electrical & Controls	MISUMI	Avai lable
290	ML1CP246-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
291	ML1CP246-Y	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
292	ML2CFS246-R	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
293	ML1CP246-G	PILOT LAMP PB	Electrical & Controls	MISUMI	Avai lable
294	PM1238HA1BAL-7	FAN	Electrical & Controls	MISUMI	Discontinued
295	PM1238HA2BAL-7	FAN	Electrical & Controls	MISUMI	Discontinued
296	MSB1S3226	SELECTOR SWITCH PB	Electrical & Controls	MISUMI	Discontinued
297	MPL1SRFM16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
298	MEL1311	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
299	MEB1311	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
300	MEB1311E	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
301	MPL1SRFM16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
302	MPL1SRFM16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
303	MPL1SRFM16-W	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
304	MPL1SRFA16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
305	MPL1SRFA16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
306	MPL1SRFA16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
307	MPL1SRFA16-W	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
308	MPL1SSFM16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
309	MPL1SSFM16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
310	MPL1SSFM16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
311	MPL1SSFM16-W	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
312	MPL1SSFA16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
313	MPL1SSFA16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
314	MPL1SSFA16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
315	MPL1SSFA16-W	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
316	MPL1SCPM16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
317	MPL1SCPM16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
318	MPL1SCPM16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
319	MPL1SCPM16-W	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
320	MPL1SCPA16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
321	MPL1SCPA16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
322	MPL1SCPA16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
323	MPL1SCPA16-W	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
324	MPB1SRFM16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
325	MPB1SRFM16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
326	MPB1SRFM16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
327	MPB1SRFM16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
328	MPB1SSFM16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
329	MPB1SSFM16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
330	MPB1SSFM16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
331	MPB1SSFM16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
332	MPB1SCPM16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
333	MPB1SCPM16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
334	MPB1SCPM16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
335	MPB1SCPM16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
336	MPB1SMM16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
337	MPB1SMM16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
338	MPB1SMM16-Y	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
339	MPB1SMA16-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
340	MPB1SMA16-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
341	MEL1311-DA	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
342	MEL1311-DB	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
343	MEL1311-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
344	MEB1311-DA	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
345	MEB1311-DB	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
346	MEB1311-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
347	MEB1311E-DA	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
348	MEB1311E-DB	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable

DANH SÁCH SẢN PHẨM SẴP NGỪNG CUNG CẤP
 LIST OF ITEMS TO BE DISCONTINUED (*Be discontinued after clearing stock)

STT No	Mã hàng Part Number	Tên hàng Product Name	Danh mục Category	Thương hiệu Brand	Tình trạng / Status Discontinued or Available
436	MPL1SRFM16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
437	MPL1SRFA16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
438	MPL1SSFM16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
439	MPL1SSFA16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
440	MPL1SCPM16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
441	MPL1SCPA16-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
442	MPL1SRFM161-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
443	MPL1SRFA161-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
444	MPL1SSFM161-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
445	MPL1SSFA161-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
446	MPL1SCPM161-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
447	MPL1SCPA161-B	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
448	MPL1SRFM16-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
449	MPL1SRFA16-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
450	MPL1SSFM16-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
451	MPL1SSFA16-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
452	MPL1SCPM16-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
453	MPL1SCPA16-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
454	MPL1SRFM161-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
455	MPL1SRFA161-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
456	MPL1SSFM161-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
457	MPL1SSFA161-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
458	MPL1SCPM161-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
459	MPL1SCPA161-B-CV	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
460	1RCVカント	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
461	1SCCVカント	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
462	MPL2CFM10M-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
463	MPL2CFSM11-W	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
464	MPB3CFM11-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
465	MPB3CFM11-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
466	MPB3MM11-R	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable
467	MPB3MM11-G	EMERGENCY STOP & PUSH BUTTON S	Electrical & Controls	MISUMI	Avai lable