Cable Carriers


Compact Type

<Nn101>

- 6 →

Cable Carriers

Flap Open-Close Type

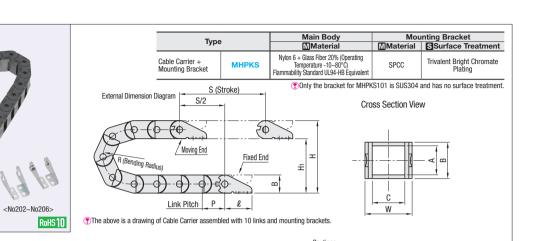

		Bending N		Bending Radius Number		Mounting	Cab	le C	arrie	r Din	nensi	ons		N	loui	ntin	g Din	nens	ions		Н		HF	V	Weight per										
				Direction	A	В	С	w	Р	Q.	F	_	J	N	Movin	g End Fixed		I End		H1		(Arc + Margin)	Motor (kg)												
Type	No.	Selection	OI LIIKS	*	^	Р		VV	VV F		Г	- '		IN	P ₁ P ₂		P ₁	P ₂	Height)		Physical Height)	(AIC + Waigili)	(Reference)												
101	101	19	5~25	(Common to Mounting on the Outer and Inner Circumferences)	9	12	9	16	20	18	-	8	9	3.2	-	-	-	-	50	38	62	109.7	0.105												
	202	30	6~34			16	20	10	26	OE.	20					10.4	24.4	10.4	22.4	80	60	95	144.2	0.222											
	202	45	8~36	1	10	20	10	20	25		20	10	10	4 =		24.4	10.4	22.4	110	90	125	191.3	0.222												
MHPKS	203	30	6~34	A	16	20	24	22	25	30		10	10 4	4.5	18.4 3	20.4	16.4	20.4	80	60	95	144.2	0.24												
(Cable Carrier +	203	45	8~36		10	20	24	32							10.4	30.4	10.4	20.4	110	90	125	191.3	0.24												
Mounting Brackets)	204	38	6~31	l	į.						_	_	_	_		_ 1	16	22	20	43	22	12					23.6	20.0	20	36	98	76	118	179.3	0.45
	204	50	7~32	В	10	22	29	43	32	43	32	10	44 6	5.8	1 -	39.0	20	30	122	100	142	217	0.43												
	206	38	6~31	1	16	16	22	11	59	20	40	32	18	14	0.0	39.6	EE 0	36		98	76	118	179.3	0.51											
206	50	7~32	1	10	22	44	59	32	2 43					39.0	55.6	30	52	122	100	142	217	0.51													

 Drawing below is for MHPKS101 only.

Part Numb	art Number		Number of Links		Unit Price Cable Carrier + Mounting Bracket (One Link Unit				
Туре	No.	Selection	OI LIIKS	*	Price x Number of Links) + Mounting Bracket Price				
	101	19	5~25	(Common to Mounting on the Outer and Inner Circumferences)					
	202	30	6~34						
	202	45	8~36						
MHPKS	203	30	6~34	A					
(Cable Carrier + Mounting Brackets)	203	45	8~36						
Woulding brackers)	204	38	6~31	_					
	204	50	7~32	В					
	006	38	6~31						
	206	50	7~32						

<Cautions on Model Selection>


• A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.

Please note that part number varies depending on outer/inner circumference mounting.



■Mounting Direction

required for use.

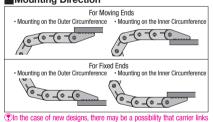

© Cable Carrier (10 Links and 1 Link) and mounting brackets are not assembled together at the time of delivery. Link connection and brackets assembly are

Install the mounting bracket fixed end on the lower side, and moving end on the upper side. (Refer to the Positional Relationship in External Dimension Diagram)

Mounting bracket shape varies depending on size.


run short.

It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of installing (removing) device.

* Mounting Bracket Structural Components

No.		Mounting Bracket Structural Components							
NO.	Direction	For Moving Ends	For Fixed Ends						
101	S (Common to Mounting on the	Common to Mounting on the	Common to Mounting on the						
101	Outer and Inner Circumferences)	Outer and Inner Circumferences	Outer and Inner Circumferences						
202~206	Α	Mounting on the Outer Circumference	Common to Mounting on the Outer and Inner Circumferences						
202~200	В	Mounting on the Inner Circumference	Common to Mounting on the Outer and Inner Circumferences						


■Link Connection and Disconnection

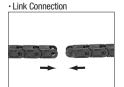

 Place links in the same direction and push from both sides to connect.



 Insert a flathead screwdriver tip between the links and pry to disconnect.

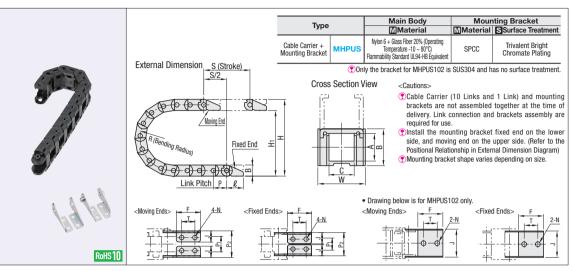

Part Number		Bending	Number	Mounting	Cab	le C	arrie	r Din	nens	ions			Mo	untir		nensio			Н		HF	K	Weight per						
Type	No.	Radius Selection	of Links	Direction *	Α	В	С	W	Р	l	F	Т	J	N	Movin P1	g End P2	Fixed P1	End P2	(Mounting Height)		(Required Physical Height)	(Arc + Margin)	Meter (kg) (Reference)						
	102	19	5~23	S (Common to Mounting on the Outer and Inner Circumferences)	9	12	20	27	20	30	22	12	*25 (23)	4.5	-	-	-	-	50	38	65	99.7	0.12						
		25	6~34																70	50	85	128.5							
	202	30	6~34	[14	20	14	26	25	30					9.8 21.8	21.8	.8 8.	20	80	60	95	144.2	0.25						
		45	8~36								20	10	10	4.5					110	90	125	191.3							
	203	30	6~34		14	20	20	32	25	30					15.8	27.8	14	26	80	60	95	144.2	0.26						
		45	8~36		14	20	20	02	20	00					10.0	27.0	1.4	20	110	90	125	191.3	0.20						
	204	38	6~36		14	22	20	40	32	43					17.4	33.4	14	30	98	76	118	179.3	0.5						
MHPUS		50	7~37								32	18	14	5.8					122	100	142	217							
(Cable Carrier +	206	38	6~36	A	14	22	40	60	32	43					37.4	53.4	34	50	98	76	118	179.3	0.56						
Mounting Brackets)		50 50	7~37 6~38	R	_	_		_	_			_							122 134	100	142 160	217 257							
	306	100	10~42		B 2	I B	R	R	R	В	В	24	34	44	60	45	60	40	24	20	7	7 35.6	55.6	32 52	52	234	200	260	414
		50	6~38	-	_														140	100		257							
		75	8~40		24.5 40 58 78 45 60									190	150	220	335.5	1											
	408	100	10~42	1		40	58	78	45	60	40	24	22	7	44	72	40	68	240	200	270	414	1.1						
		150	13~45														340	300	370	571									
		50	6~38																140	100		257							
	412		9~41		24.5	40	97	117	45	60	40	24	22	7	83	111	79	107	190	150	220	335.5	1.3						
			10~42																240	200		414							

Part Number	er	Bending Radius	Number	Mounting Direction	Unit Price
Туре	No.	Selection	of Links	*	Cable Carrier + Mounting Bracket (One Link Un Price x Number of Links) + Mounting Bracket Pri
	102	19	5~23	S (Common to Mounting on the Outer and Inner Circumferences)	
		25	6~34		
	202	30	6~34		
		45	8~36	1	
	203	30	6~34		
	203	45	8~36		
	204	38	6~36		
MUDUO	204	50	7~37		
MHPUS (Cable Carrier	206	38	6~36	Α	
(Cable Carrier + Mounting Brackets)		50	7~37		
mountaing Drachoto)	306	50	6~38	В	
		100	10~42	,	
		50	6~38		
	408	75	8~40		
		100 10~42			
		150	13~45		
		50	6~38		
	412	75	9~41		
	l	100	10~42	l	

<Cautions on Model Selection>

(*) A Cable Carrier and suitable Mounting Brackets (Moving Ends x1 set, Fixed Ends x1 set) are in a set.

Please note that part number varies depending on outer/inner circumference mounting.



Mounting Direction

For Moving Ends

Mounting on the Outer Circumference

Mounting on the Inner Circumference

* () indicates Fixed End dimensions

For Fixed Ends

• Mounting on the Outer Circumference
• Mounting on the Inner Circumference

In the case of new designs, there may be a possibility that carrier links run short.

It is recommended that links are selected longer by one or two links, and are adjusted (removed) at the time of installing (removing) device.

* Mounting Bracket Structural Components

_	WOULL	ing bracket	Structural C	omponents					
	No.		Mounting Bracket Structural Components						
	NO.	Direction	For Moving Ends	For Fixed Ends					
	102	S	Common to Mounting on the	Common to Mounting on the					
	102	(Common to Mounting on the Outer and Inner Circumferences)	Outer and Inner Circumferences	Outer and Inner Circumferences					
	202~206	Α	Mounting on the Outer Circumference	Common to Mounting on the Outer and Inner Circumferences					
	202~200	В	Mounting on the Inner Circumference	Common to Mounting on the Outer and Inner Circumferences					
	306~412	Α	Common to Mounting on the Outer and Inner Circumferences	Mounting on the Outer Circumference					
	300~412	R	Common to Mounting on the	Mounting on the Inner Circumference					


• Flap Opening and Closing • Link Connection (Common) • Link Disconnection (Common)



of a flathead screwdriver into

the side window and pry. To close the flap, push down.

 Open link flaps, mate the blocks with each other and push the both ends to joint fit together.

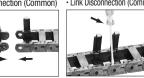

 Open the link flaps, insert and push down a flathead screwdriver in a gap betwee the links to disconnect.